 
 


ROZTEČ VRTÁNÍ C (mm)	PRŮMĚR (mm)	VÝŠKA H (mm)	SATIN NIKL	SATIN CHROM	CHROM	MOSAZ
KNOPKA	18	23	<b>35261</b>	<b>35262</b>	<b>35263</b>	-
KNOPKA	25	32	<b>35271</b>	<b>35272</b>	<b>35273</b>	<b>35274</b>

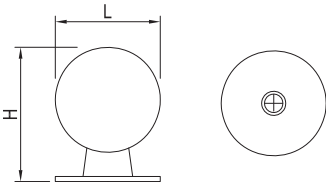

ROZTEČ VRTÁNÍ C (mm)	PRŮMĚR (mm)	VÝŠKA H (mm)	SATIN NIKL	SATIN CHROM	CHROM	BROUŠENÝ NIKL
KNOPKA	15	24	<b>157305</b>	<b>157306</b>	<b>157308</b>	<b>157307</b>

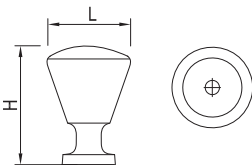

ROZTEČ VRTÁNÍ C (mm)	PRŮMĚR (mm)	VÝŠKA H (mm)	SATIN NIKL	SATIN CHROM	CHROM	BROUŠENÝ NIKL	ČERNÁ
KNOPKA	15,5	27	<b>157289</b>	<b>157290</b>	<b>157292</b>	<b>157291</b>	<b>157293</b>
KNOPKA	20,5	34,5	<b>157294</b>	<b>157295</b>	<b>157297</b>	<b>157296</b>	<b>157299</b>

