




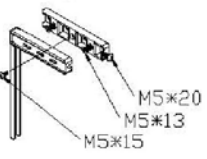



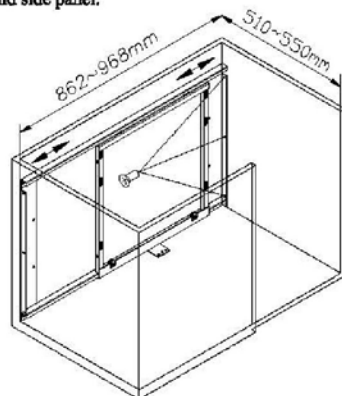


Installation Instruction For Evil Corner With Damping (Right Open Door)


list of fittings

Small basket	Big basket	ST4*16	M5*12	Gasket	Door mounting bracket	Swivel arm	The side frame	The rear frame
2 pcs	2 pcs	28 pcs	2 pcs	2 pcs	2 set (Dispart left and right)	1 set	1 set	1 set
					 M5*20 M5*13 M5*15		 1 pcs	


Step 1: Mount the extensible rear slide frame on rear and side panel.




Step 2: Mark a line on side and bottom panel from front edge 7mm, keep the side frame in closed position and aim A point on line.

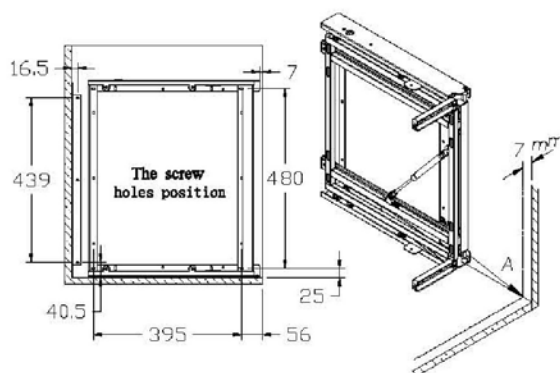


Step 3: Pull-out the side frame in open position, and mounting the side frame on side and bottom panel.

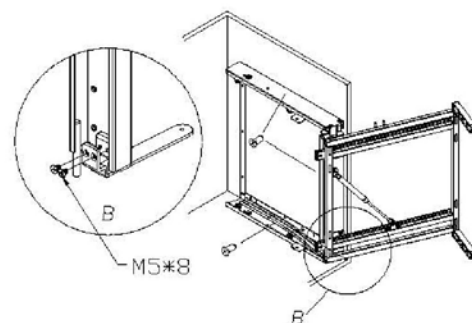



Step 4: Connect side frame and rear slide frame by swivel arm, and firm door mount bracket on pull-out side frame.

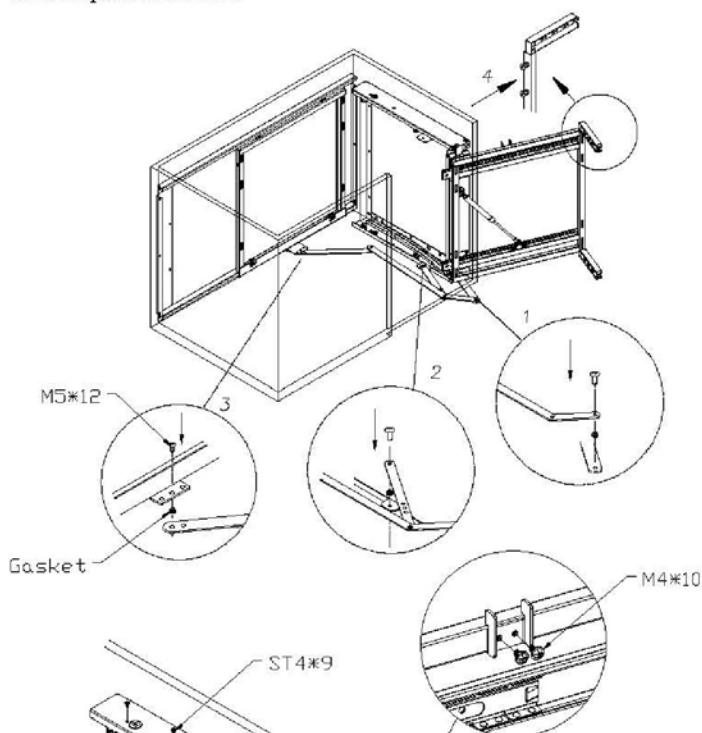

Step 5: Mark the screw holes on door panel, and screw two brackets on door panel. Connect door panel with pull-out side frame by door mount bracket.(m/m)

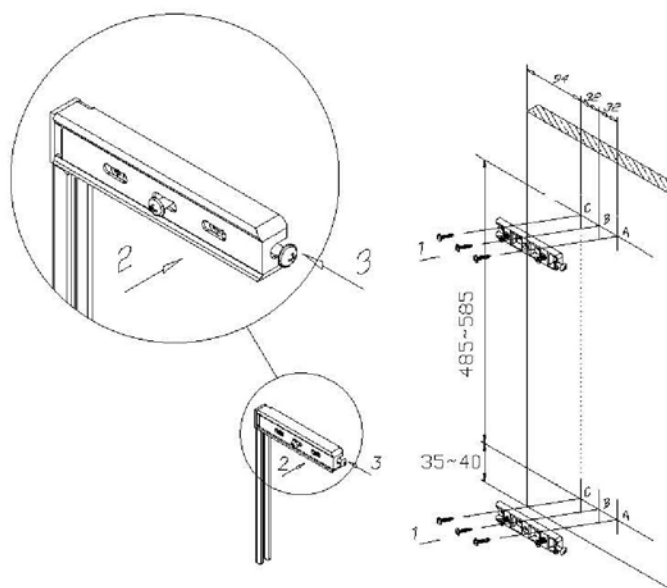


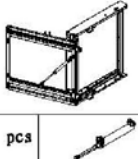

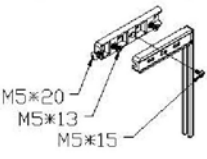


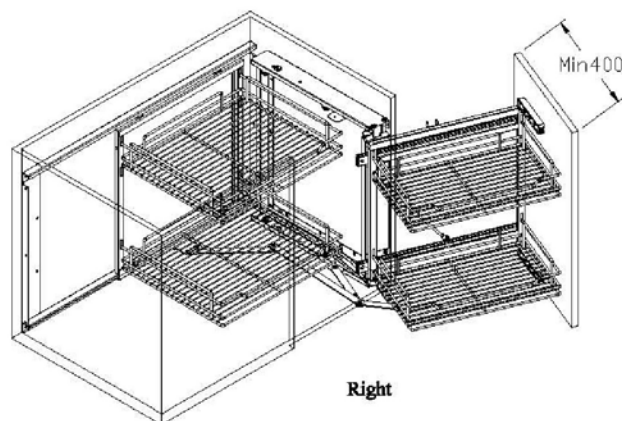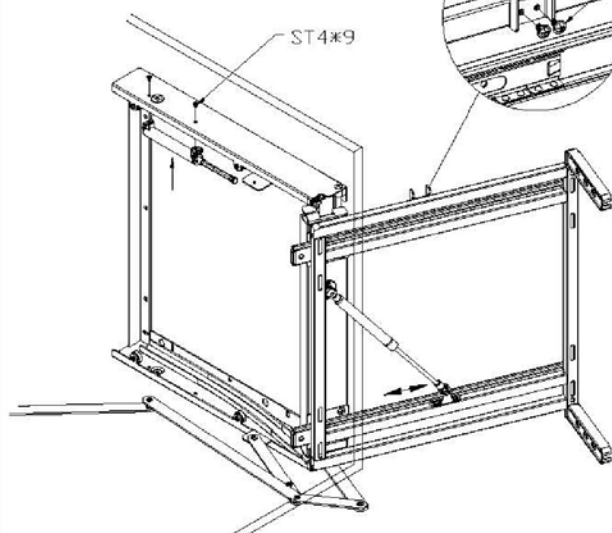


Adjusting closure pitch of cabinet door by the door mounting bracket, then fixup all screws.(Pay attention to assembly swivel arm, for left and right mounted door mirror image)




Right

Installation Instruction For Evil Corner With Damping (Left Open Door)


list of fittings

The rear frame	The side frame	Swivel arm	Door mounting bracket	Gasket	M5*12	ST4*16	Big basket	Small basket
1 set	1 set	1 set	2 set (Dispart left and right)	2 pcs	2 pcs	28 pcs	2 pcs	2 pcs
	 1 pcs		 M5*20 M5*13 M5*15					


Step 1: Mount the extensible rear slide frame on rear and side panel.

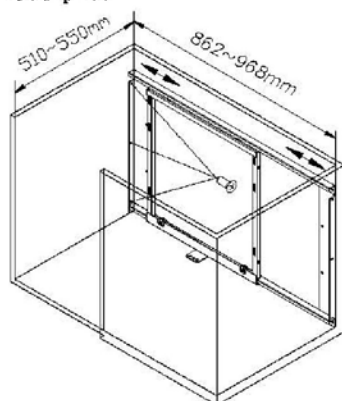


Step 2: Mark a line on side and bottom panel from front edge 7mm, keep the side frame in closed position and aim A point on line.

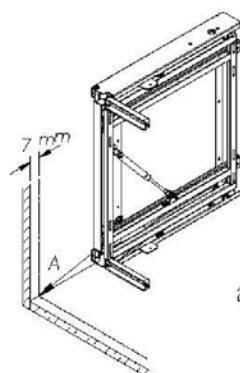


Step 3: Pull-out the side frame in open position, and mounting the side frame on side and bottom panel.

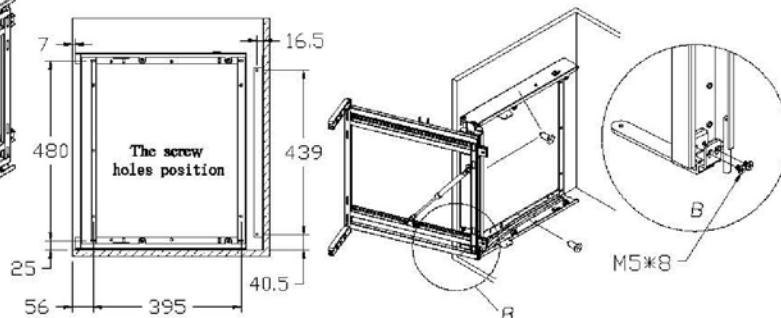


Step 4: Connect side frame and rear slide frame by swivel arm, and firm door mount bracket on pull-out side frame.

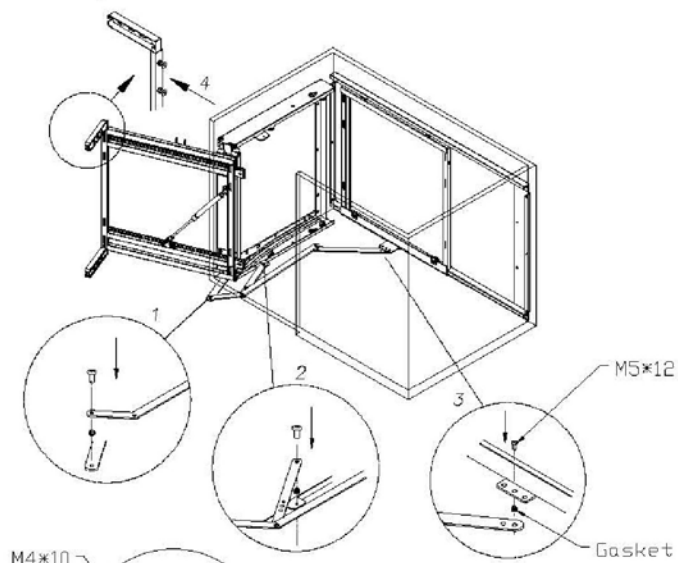

Step 5: Mark the screw holes on door panel, and screw two brackets on door panel. Connect door panel with pull-out side frame by door mount bracket (m/m).

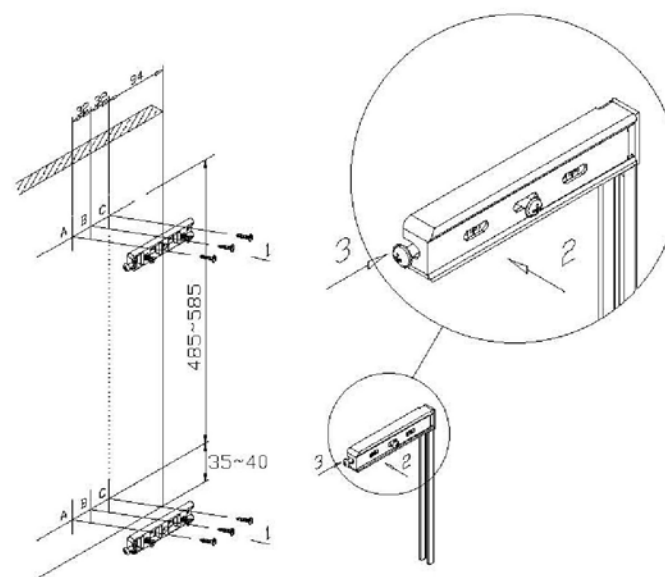

Adjusting closure pitch of cabinet door by the door mounting bracket, then fixup all screws. (Pay attention to assembly swivel arm, for left and right mounted door mirror image)

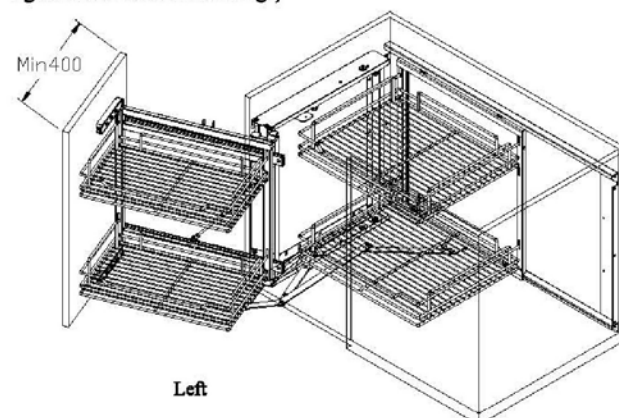

Left